

PETOL™ Drill Pipe Tong

DA8184

Operating Manual

GEARENCH™
P.O. Box 192
4450 South Highway 6
Clifton, Texas 76634
Phone: (254) 675-8651
Fax: (254) 675-6100

© 2018 by GEARENCH. All rights reserved

Form DA8184 revision 12-17-18

Table of Contents

DA8184 PETOL™ Drill Pipe Tong Description	1
Warranty	2
Overloading / Shock Loads / Side Loading	6
Environmental Conditions	7
Normal Life Expectancy.....	7
Lubrication	8
Periodic Inspection List for PETOL™ Special Chain	8
Operation	11
Suspension.....	11
Chain Screw Adjustment	12
Chain Identification Guide.....	13
Dimensions – clevis handles	14
Dimensions – loop handles	15
Torque and Diameter capacity	16
DA8184-C09 torque ratings and chain selection.....	16
DA8184-C18 torque ratings and chain selection.....	17
DA8184-C36 torque ratings and chain selection.....	18
DA8184-L23 torque ratings and chain selection.....	19
DA8184-L28 torque ratings and chain selection.....	20
DA8184-L36 torque ratings and chain selection.....	21
Parts List.....	22
Wear Limits.....	24
Non-Destructive Evaluation.....	25
Weld Repairs	26

DA8184 PETOL™ Drill Pipe Tong Description

The PETOL™ Drill Pipe Tongs were designed for making up and breaking out drill pipe, and tubular products. The DA8184 will work diameters from 4 inches to 14 inches and up to 95,000 foot-pounds of torque depending upon diameter and handle configuration.

The tongs are adjusted by exchanging chain sections and adjusting a chain screw nut to work the various diameters.

The Drill Pipe Tongs have the following features:

- A high strength, heat treated alloy chain for rugged, dependable service.

- High strength alloy steels used throughout for long life with the toughest jobs.

- A hanger attached to the tong handle to suspend the tong during operation when used on vertical pipe applications. A hanger is not available for the DH8184-C09 handle.

- A chain screw and nut to provide for fine adjustment of the chain.

- Loop and clevis handle ends in various lengths for most any application.

Warranty

What Is Covered

GEARENCH™ tools are expressly warranted to you, the purchaser, to be free of defects in material and workmanship.

How Long Coverage Lasts

This express warranty lasts for the lifetime of the GEARENCH tool. Warranty coverage ends when the tool becomes unusable for reasons other than defects in workmanship or material.

How Can You Get Warranty Service

To obtain the benefit of this warranty, contact a GEARENCH sales representative in Clifton, Texas.
GEARENCH · 4450 South Highway 6 · P.O. Box 192 · Clifton, TX 76634

What Will We Do To Correct Problems

Warranted products will be repaired or replaced, at GEARENCH's option, and returned at no charge to you, the original purchaser; or, if after three attempts at repair or replacement during the warranty period, the product defect in material or workmanship persists, you can elect to receive a full refund of your original purchase price for the product.

What Is Not Covered

Defects, failures or conditions that are due to normal wear and tear, abuse or misuse, are not covered by this limited warranty. In addition, this limited warranty is in lieu of all other warranties, express or implied, verbal or written. To the maximum extent allowed by law GEARENCH disclaims all implied warranties, including implied warranties of merchantability and/or fitness for a particular purpose. GEARENCH also specifically denies any liability for any incidental damages and/or consequential damages, including but not limited to property damage to property other than the product itself, loss of sales profits, down time, costs or any other damages measurable in money, whether or not included in the foregoing enumeration.

Please be advised that some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary from state to state, province to province, or country to country.

Are Personal Injuries Covered

In the event you, someone working for you, or any other person sustain a personal injury as a result of using the GEARENCH tool, GEARENCH limits its potential liability for such a claim or injury to the fullest extent allowed by law, and disclaims and denies any liability for such personal injury.

Please be advised that some states do not allow the exclusion or limitation of liability for personal injuries, so the above limitation or exclusion may not apply to you, or the individual claiming injury.

No Other Express Warranty Applies

This GEARENCH LIMITED WARRANTY is the sole and exclusive warranty, express or implied for GEARENCH products. No employee, agent, dealer or other person is authorized to alter, modify, expand or reduce the terms of this warranty or to make any other warranty on behalf of GEARENCH.

Law Applicable

All matters related to the sale and/or use of the GEARENCH tool that is the subject of this limited warranty, along with the construction and enforcement of the terms of this limited warranty itself, shall be subject to the substantive and procedural laws of the state of Texas, not the conflicts of laws provisions of Texas, but rather the laws of Texas themselves.

Forum Selection Clause

Any dispute arising out of the sale and/or use of the GEARENCH tool that is the subject of this limited warranty shall be presented in the form of a claim or lawsuit to the offices of GEARENCH in Clifton, Bosque County, Texas. No claim or suit may be brought against GEARENCH, arising out of the sale and/or use of the tool, or arising out of the terms of this warranty, except in such forum. Purchase and/or use of the GEARENCH tool makes you subject to the benefits and limitations of this limited warranty. Accordingly, any writ, judgment or other enforcement, obtained from a jurisdiction, county, parish, state or federal court or other country, other than that from the forum identified above, shall be void and unenforceable against GEARENCH.

Arbitration Clause

In the event of dispute or claim arises out of the sale and/or use of the GEARENCH tool that is the subject of this limited warranty, or arises out of the interpretation or enforcement of the terms and conditions of this limited warranty, such dispute shall be submitted to binding arbitration pursuant to the rules of the American Arbitration Association. If required to accomplish the purpose of this Arbitration clause, the purchaser hereby expressly waives any right to demand trial by jury.

Complete Agreement

This express limited warranty contains the entire agreement regarding express or implied warranties related to the GEARENCH tool that is the subject of it. No writing or language contained in the purchase order or any other document of the purchaser, or invoice of GEARENCH or any intermediate seller, shall be construed as modifying, in any way, the rights and liabilities contained in this limited warranty. GEARENCH expressly disclaims any obligations expressed in any customer purchase order or document that are contrary to the terms and limitations of this warranty.

Severability

If any term or limitation contained in this limited warranty is deemed unenforceable by law, then the term shall be severed from the remaining portions of the limited warranty which shall remain enforceable.

All communications to GEARENCH regarding the use of the tool and any aspect of the sale of the tool of this limited warranty should be addressed to GEARENCH.

GEARENCH · 4450 South Highway 6 · P.O. Box 192 · Clifton, TX 76634

Safe Practices and Procedures

Responsibility

"It is the responsibility of the employer to train the employee in the proper selection and usage of tools, chains, etc., and to ensure that they are selected and used in that manner. In many instances, injury results because it is assumed that anybody knows how to use common hand tools. Observations and the record show that this is not the case. A part of every job instruction program should therefore be detailed training in the proper use of hand tools (and of all other special tools and equipment needed to accomplish the job)." - (Source: National Safety Council)

"Employers are responsible for the safe condition of tools and equipment used by employees, including tools and equipment which may be furnished by employees." - (Source: OSHA 1910.242A)

Replacement Parts

Use only PETOL™ replacement parts - no other parts are of comparable strength, quality and interchangeability.

Safety

While we pride ourselves on the quality and dependability we build into GEARENCH™ tools and products, we caution users that it is only prudent to know and follow the simple rules of safety when using our products, or anyone else's.

Always follow safe practices and procedures in accordance with the recommendations of OSHA, The National Safety Council (NSC), The Hand Tools Institute (HTI), The National Association of Chain Manufacturers (NACM), The International Association of Drilling Contractors (IADC), Etc. All applicable Governmental rules, regulations or restrictions, now in effect or which may be promulgated, take precedence over the suggestions in this publication. The information in this publication is designed to supplement standard safe practices and procedures, not in lieu of, or replacement thereof.

Safe Practices

(Source: The National Safety Council)

Failure to observe one or more of the following five safe practices accounts for most hand and powered tool accidents:

1. ALWAYS WEAR SAFETY GOGGLES TO PROTECT EYES
2. SELECT THE RIGHT TOOL FOR THE JOB
3. KEEP TOOLS IN GOOD CONDITION
4. USE TOOLS CORRECTLY
5. KEEP TOOLS IN A SAFE PLACE

Safety Goggles must always be worn by persons in any area where hand and powered tools are being used.

Never apply excess leverage to a wrench or tool by means of a "Cheater Bar". Never strike wrenches and tools with hammers or other objects.

All tools should be kept clean, inspected on a regular basis, and replaced when they show signs of wear.

Be especially careful not to place yourself in a position that could result in bodily injury in the event of a failure. Brace yourself firmly and pull rather than push when wrenching. (If necessary to push, do so with the flat of the hand rather than gripping around the wrench.)

Never stand under or near loads being hoisted off the ground.

READ SAFE PRACTICES AND PROCEDURES MANUAL, CATALOG INFORMATION AND PRODUCT LABELING PRIOR TO OPERATION.

Spinning and drill pipe chain, cathead chain, and the PETOL™ Connecting Link attachment are designed for the specific purpose for which the name indicates. Chains and attachments that are to be used for any other purpose should be selected in accordance with the recommendations of ASTM, NACM, Rigger's Handbook, and the commercial chain manufacturer's technical manuals.

Safety Sources and Publications

In the interest of Safety the following sources of Safety information is furnished:

The Hand Tools Institute (HTI)
25 North Broadway
Tarrytown, New York 10591
(914) 332-0040
www.hti.org

The National Safety Council (NSC)
1121 Spring Lake Drive
Itasca, Illinois 60143-3201
(630) 285-1121
www.nsc.org

International Safety Council
1121 Spring Lake Drive
Itasca, Illinois 60143-3201
(630) 285-1121

Responsibility of Distributors

IT IS THE RESPONSIBILITY OF THE PURCHASERS OF GEARENCH PRODUCTS TO CONVEY THE INFORMATION IN THIS PUBLICATION AND ANY OTHER INFORMATION RELATING TO THE INDIVIDUAL PRODUCT, THROUGH THE CHANNELS OF DISTRIBUTION, DOWN TO AND INCLUDING THE INDIVIDUAL USING THE PRODUCT

NOTE:

In view of the fact that the actual use determines whether safety requirements have been met, the ultimate responsibility to comply rests with the end user.

The service life of leaf chains can be altered by a variety of adverse operating conditions. The following information discusses the most important of these conditions for consideration when operating or scheduling replacement of leaf chain systems.

Overloading / Shock Loads / Side Loading

Attempting to “inch loads which are beyond the rated capacity of the tool.

Striking the tool with a hammer or other object while force is being exerted in an attempt to loosen a “frozen” joint.

Side pull can be caused by pulling or pushing on the tong in a direction that is not along a perpendicular plane, unlevelled mounting of the tong or vise, inadequate support of the part being broken out, and improper seating of the part being broken out in the tong or vise. Improper seating will occur when the diameter of the part is not consistent within the width of the tong or vise jaw.

Environmental Conditions

Wrench chains operate in widely varying environments, from wet outdoor conditions to mildly or highly corrosive industrial atmospheres. They can also be exposed to abrasives such as sand or grit.

The possible effects include:

Moisture - Corrosion and rust reduce chain strength by causing pitting and cracking.

Temperature - Very cold temperatures reduce chain strength by embrittlement.

Chemical Solutions or Vapors - Corrosive attack of the chain components' grain structure and/or the mechanical connections between the chain components (crevice corrosion) may occur. Cracking often is microscopic. Propagation to complete failure can be eventual or sudden.

Abrasives - Accelerated wearing and scoring of the articulating chain members (pins and plates) may occur, with a corresponding reduction in chain strength. Due to inaccessibility of the bearing surfaces (pin surfaces and plate apertures), wear and scoring are not readily noticeable.

These conditions, when coupled with normal chain wear and inherent residual stress (normally in the chain as constructed), can result in environmentally assisted failure. It is impossible to predict chain life under complex conditions, as the degree of hostility and its effects are dependent on many variables such as temperature, time of exposure, concentration of corrosive atmosphere or medium, degree of abrasive wear, etc. Establishing the degree and frequency of unpredictable dynamic loading is also difficult.

Normal Life Expectancy

A leaf chain's normal life expectancy can be expressed as a maximum percent of elongation. This is generally between 2% and 3% of pitch. As the chain flexes back and forth, the bearing joints (pins and inside link plates) gradually wear from articulation. As with all steel bearing surfaces, the precision hardened steel joints of leaf chain require a constant film of oil between mating parts to prevent wear and to resist corrosion.

Lubrication









One of the most important but often-overlooked factors is adequate lubrication. In addition to reducing internal friction, maintaining a film of oil on all chain surfaces will inhibit rusting and corrosion. This is important as corrosion of highly stressed, hardened steel chain components can cause a major reduction in the load capacity of leaf chain and result in link plate cracking.

Protection from corrosion is important in storage as well as in service. The factory lubricant applied to PETOL™ Chain is a “Fingerprint Neutralizing Water-Displacing Corrosion Preventative”. This is an excellent rust and corrosion inhibitor for chains in storage. When installing these chains new, do not attempt to steam clean or degrease this lubricant. A grade of SAE 30 or 40 weight, non-detergent motor oil should be used as supplemental lubricant and a film of this oil should be maintained on all surfaces and internal bearing joints. Also, do not attempt to paint new chains. Though painting may help inhibit corrosion, it will seal off critical clearances and restricts oil from reaching the pin surfaces where it is needed for good joint lubrication.

When operating in dusty environments, lubricated chains will accumulate a paste-like buildup of grime. At periodic intervals, this buildup should be removed by cleaning and the chain should be immediately re-lubricated. Do not use caustic or acid type cleaners; use a stiff brush and a certified safe petroleum base solvent.

Periodic Inspection List for PETOL™ Special Chain

1. PRIOR TO EACH USE, LEAF CHAIN AND TOOLS SHOULD BE INSPECTED FOR SERVICEABILITY AND LUBRICATION.
2. USE ONLY PETOL™ AND TITAN™ REPLACEMENT PARTS - NO OTHER PARTS ARE OF COMPARABLE STRENGTH, QUALITY, AND INTERCHANGEABILITY.


APPEARANCE AND/OR SYMPTOM	PROBABLE CAUSE	CORRECTION
<p>Excessive Length (Elongation)</p> 	<p>Normal wear</p> <p>Permanent deformation (stretch) from overload</p>	<p>Replace chain</p> <p>Replace chain and correct cause of overload</p>
<p>Abnormal Protrusion of Pins</p> 	<p>Overloading</p> <p>Inadequate lubrication</p> <p>Side loading</p>	<p>Replace chain and correct cause of overload</p> <p>Replace chain and improve lubrication</p> <p>Replace chain and correct cause of side load</p>
<p>Cracked Plates (Fatigue)</p> 	<p>Overloading</p> <p>Side loading</p>	<p>Replace chain and correct cause of overload</p> <p>Replace chain and correct cause of side load</p>
<p>Arc-Like Cracked Plates (Stress Corrosion)</p> 	<p>Severe rusting or exposure to acidic or caustic medium, plus static stress at press fit between pin and plate</p>	<p>Replace chain and protect from hostile environment</p>
<p>Enlarged Holes</p> 	<p>Overloading</p>	<p>Replace chain and correct cause of overload</p>
<p>Cracked Plates (Corrosion Fatigue) Perpendicular to Pitch Line, plus rust or other evidence of chemical corrosion</p> 	<p>Corrosive environment</p>	<p>Replace chain and protect from hostile environment</p>
<p>Fractured Plates (Tension Mode)</p> 	<p>Overloading</p>	<p>Replace chain and correct cause of overload</p>
<p>Tight Joints</p> 	<p>Dirt or foreign substance packed in joints</p> <p>Corrosion and rust</p> <p>Bent pins</p>	<p>Clean and relube</p> <p>Replace chain and protect from hostile environment</p> <p>Replace chain</p>

Safety Precautions

1. Always wear safety goggles to protect eyes.
2. Select the right tool for the job.
3. Keep tools in good condition.
4. Use tools correctly.
5. Keep tools in a safe place.
6. Wear protective clothing, gloves and safety shoes as appropriate.
7. Use lengths of assembled chain. Do not build lengths from individual components.
8. Do not attempt to rework damaged chain by replacing only the components obviously faulty. The entire chain may be compromised and should be discarded.
9. Never electroplate assembled leaf chains or components. Plating will result in failure from hydrogen embrittlement.
10. Do not weld any chain or component. Welding spatter should never be allowed to come into contact with chain or components.
11. Leaf chains are manufactured exclusively from heat-treated steels and therefore must not be annealed. If heating a chain with a cutting torch is absolutely necessary for removal, the chain should not be reused.
12. Inspect chains frequently and regularly for link plate cracking, pin turning, pin protrusion and corrosion.
13. Use only PETOL™ & TITAN™ replacement parts to ensure proper strength.

Operation

The typical application of one Drill Pipe Tong is shown in the figure below. Normally an additional tong is used as a backup. The backup tong is not shown for clarity. The tong will exert torque when the cylinder is retracted as shown. The tong will ratchet when the cylinder is extended. Ratcheting is used when the tong must be pulled more than once to completely makeup or breakout the connection.

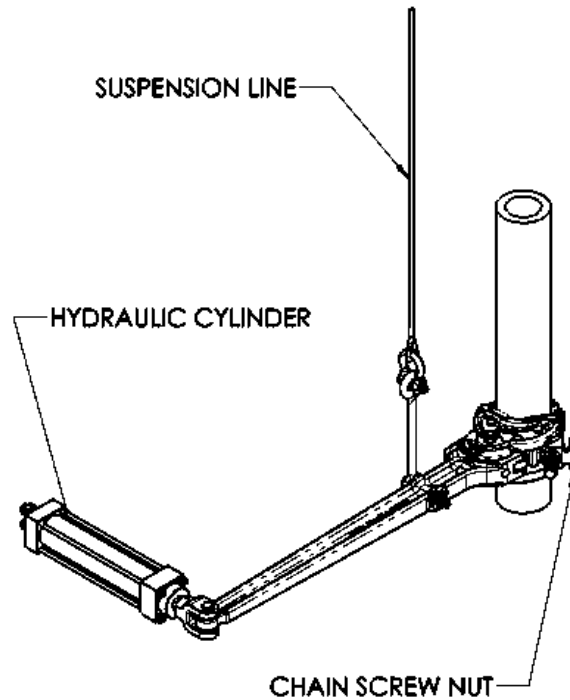


Suspension

When working vertical pipe, the tong should be suspended by the attached hanger. Adjust the hanger to obtain the best possible balance of the tong. Always use a suspension line of adequate capacity to safely hold up the tong during operation.

Chain Screw Adjustment


Adjust the chain screw nut for approximately 1-3/4" clearance between the lower handle bumper and the contact surface on the jaw as shown in the diagram below. The jaw spring must be compressed to latch the chain screw nut.

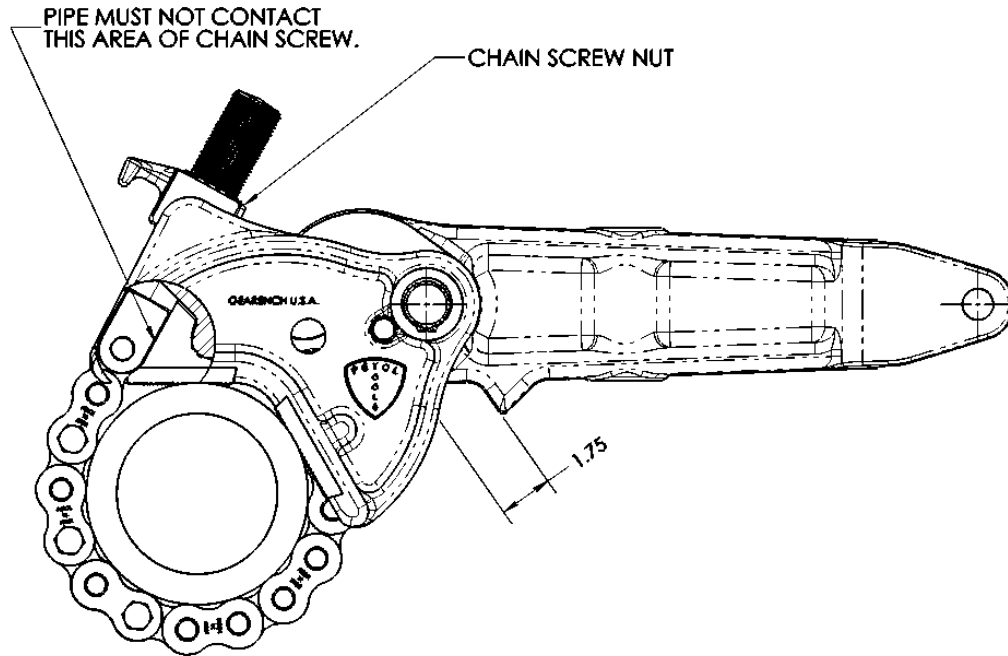


Warning! The pipe must NOT contact the side of the chain screw as shown above. Contact will cause premature breakage of the chain screw and could cause injury or death. If the chain screw contacts the pipe, the chain MUST be lengthened by adding 2 pitches of chain.

Chain Identification Guide


2 LINK SECTION

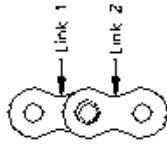


5 LINK SECTION

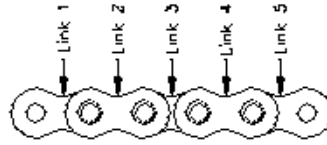


CHAIN ASSEMBLY

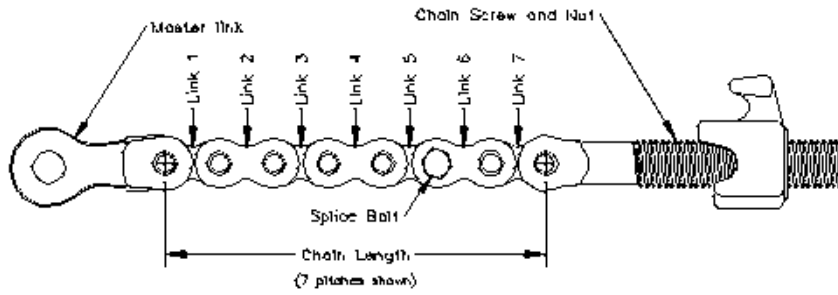

THIS IS WHAT A CHAIN PART NUMBER TELLS YOU


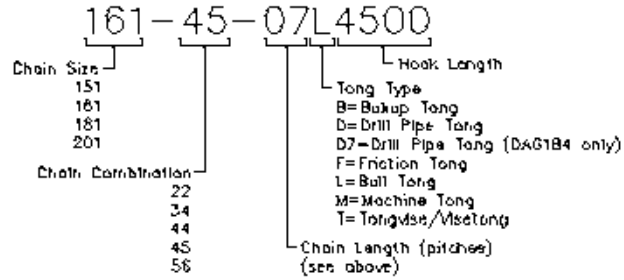


Dimensions – clevis handles

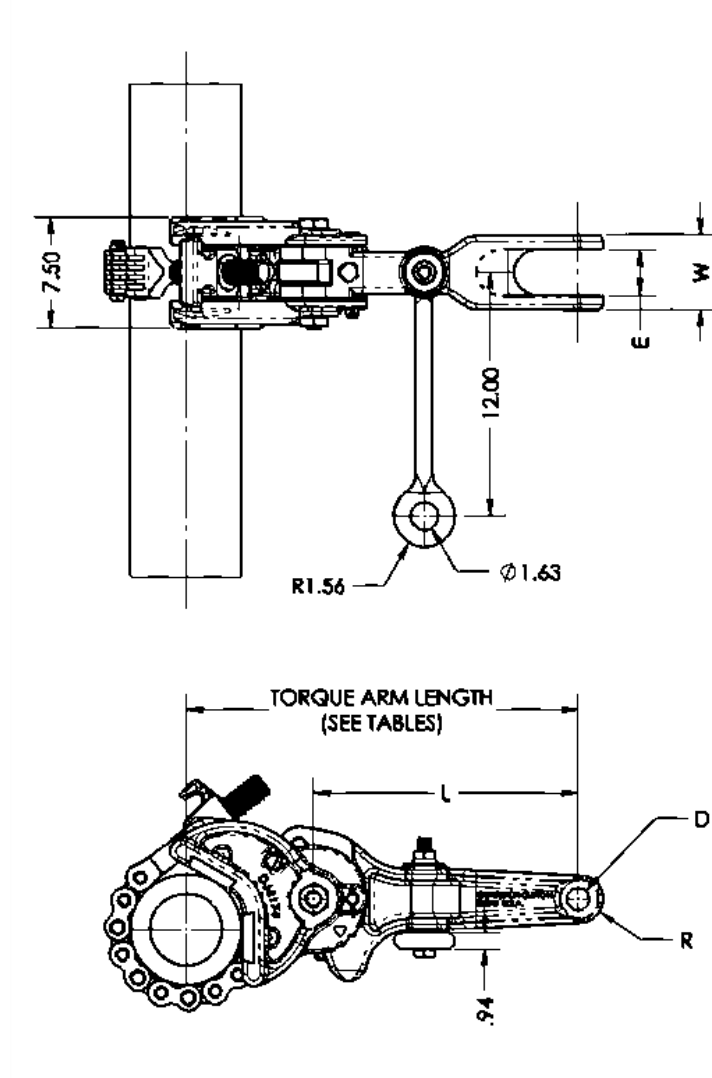

Assembly	L	D	R	E	W
DA8184-C09	9.00	1.640	1.50	2.02	4.00
DA8184-C18	18.00	1.015	1.13	2.24	4.03
DA8184-C36	36.00	2.000	1.88	2.50	4.00

Dimensions – loop handles

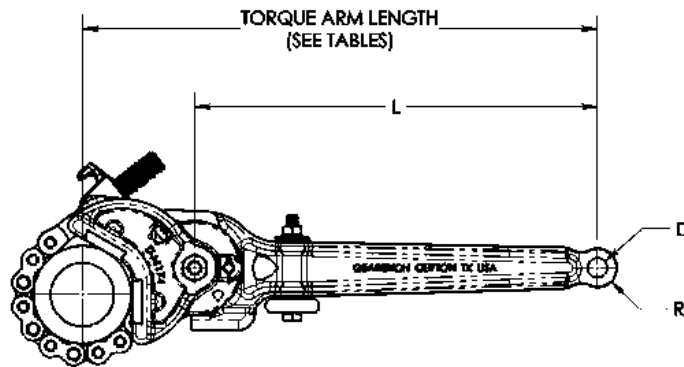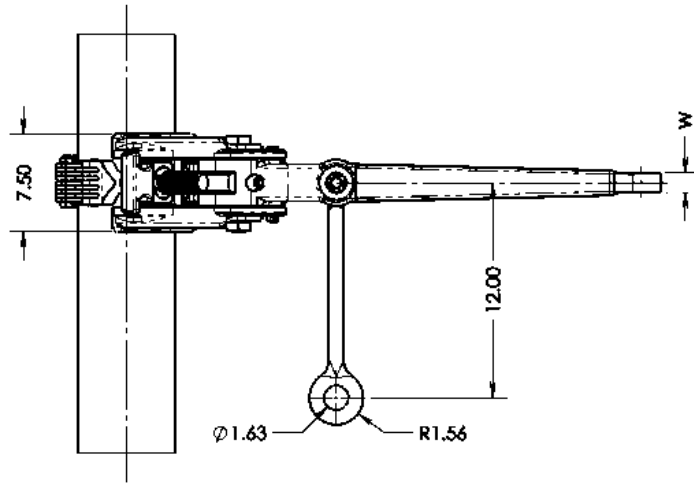

Assembly	L	D	R	W
DA8184-L23	23.00	1.750	1.50	2.25
DA8184-L28	28.00	1.631	1.50	2.00
DA8184-L36	36.00	2.00 (CAST)	1.94	1.38

Torque and Diameter capacity

The following table lists the maximum working torques and the corresponding handle loads for the diameter range of the assembly. The table used must match the handle and pipe used in the assembly. Torque arm lengths, maximum torque and maximum handle load will vary with each diameter and handle combination.

DA8184-C09 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	15.59	49,300	37,900	161-45-07D	N/A
4-1/2	15.74	54,000	41,200	(4 – 4-1/2)	161-54-08D
5	15.88	58,800	44,400	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	16.03	63,500	47,500	(4-5/8 – 5-3/4)	161-54-10D
6	16.17	68,000	50,500	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	16.31	72,600	53,400		161-54-12D
7	16.46	77,000	56,100	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	16.60	81,600	59,000		161-54-14D
8	16.75	86,000	61,600	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	16.89	88,500	62,900		161-54-16D
9	17.04	89,500	63,000	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	17.18	89,500	62,500		161-54-18D
10	17.33	90,500	62,600	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	17.47	90,500	62,100		161-54-20D
11	17.61	91,800	62,500	161-45-21D (11-1/2 – 12-5/8)	(10-7/8 – 12-1/8)
11-1/2	17.76	91,800	62,000		161-54-22D
12	17.90	93,000	62,300	161-45-23D (12-5/8 – 13-3/4)	(12 – 13-1/4)
12-1/2	18.05	93,000	61,800		161-54-24D
13	18.19	94,000	62,000	161-45-25D (13-3/4 – 14)	(13-1/8 – 14)
13-1/2	18.34	94,000	61,500		
14	18.48	95,000	61,600		

WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

DA8184-C18 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	24.59	45,800	22,300	161-45-07D	N/A
4-1/2	24.74	49,900	24,200	(4 – 4-1/2)	161-54-08D
5	24.88	54,000	26,000	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	25.03	57,900	27,700	(4-5/8 – 5-3/4)	161-54-10D
6	25.17	61,800	29,400	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	25.31	63,500	30,100		161-54-12D
7	25.46	67,000	31,500	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	25.60	67,000	31,400		161-54-14D
8	25.75	67,800	31,500	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	25.89	67,800	31,400		161-54-16D
9	26.04	68,300	31,400	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	26.18	68,300	31,300		161-54-18D
10	26.33	68,800	31,300	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	26.47	68,800	31,100		161-54-20D
11	26.61	69,300	31,200		(10-7/8 – 12-1/8)
11-1/2	26.76	69,300	31,000	161-45-21D (11-1/2 – 12-5/8)	161-54-22D
12	26.90	69,900	31,100		161-54-23D
12-1/2	27.05	69,900	31,000	161-45-23D (12-5/8 – 13-3/4)	(12 – 13-1/4)
13	27.19	70,400	31,000		161-54-24D
13-1/2	27.34	70,400	30,800	161-45-25D (13-3/4 – 14)	(13-1/8 – 14)
14	27.48	70,900	30,900		

WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

DA8184-C36 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	42.59	43,300	12,200	161-45-07D	N/A
4-1/2	42.74	47,000	13,200	(4 – 4-1/2)	161-54-08D
5	42.88	50,700	14,200	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	43.03	54,100	15,100	(4-5/8 – 5-3/4)	161-54-10D
6	43.17	57,200	15,900	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	43.31	57,300	15,900		161-54-12D
7	43.46	57,200	15,800	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	43.60	57,400	15,800		161-54-14D
8	43.75	57,600	15,800	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	43.89	57,400	15,700		161-54-16D
9	44.04	57,600	15,700	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	44.18	57,800	15,700		161-54-18D
10	44.32	57,900	15,700	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	44.47	57,800	15,600		161-54-20D
11	44.61	57,900	15,600	161-45-21D (11-1/2 – 12-5/8)	(10-7/8 – 12-1/8)
11-1/2	44.76	58,100	15,600		161-54-22D
12	44.90	57,900	15,500	161-45-23D (12-5/8 – 13-3/4)	(12 – 13-1/4)
12-1/2	45.05	58,100	15,500		161-54-24D
13	45.19	58,300	15,500	161-45-25D (13-3/4 – 14)	(13-1/8 – 14)
13-1/2	45.34	58,500	15,500		
14	45.48	58,300	15,400		

WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

DA8184-L23 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	29.59	44,800	18,100	161-45-07D	N/A
4-1/2	29.74	48,800	19,600	(4 – 4-1/2)	161-54-08D
5	29.88	52,700	21,100	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	30.03	56,500	22,500	(4-5/8 – 5-3/4)	161-54-10D
6	30.17	60,200	23,900	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	30.31	62,900	24,900		161-54-12D
7	30.46	62,900	24,700	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	30.60	62,900	24,600		161-54-14D
8	30.75	63,400	24,700	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	30.89	63,400	24,600		161-54-16D
9	31.04	63,400	24,500	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	31.18	63,900	24,500		161-54-18D
10	31.32	63,900	24,400	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	31.47	63,900	24,300		161-54-20D
11	31.61	64,500	24,400		(10-7/8 – 12-1/8)
11-1/2	31.76	64,500	24,300	161-45-21D (11-1/2 – 12-5/8)	161-54-22D
12	31.90	64,500	24,200		(12 – 13-1/4)
12-1/2	32.05	65,000	24,300	161-45-23D (12-5/8 – 13-3/4)	161-54-24D
13	32.19	65,000	24,200		(13-1/8 – 14)
13-1/2	32.34	65,000	24,100	161-45-25D (13-3/4 – 14)	
14	32.48	65,000	24,000		

WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

DA8184-L28 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	34.59	44,000	15,200	161-45-07D	N/A
4-1/2	34.74	48,000	16,500	(4 – 4-1/2)	161-54-08D
5	34.88	51,800	17,800	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	35.03	55,500	19,000	(4-5/8 – 5-3/4)	161-54-10D
6	35.17	59,000	20,100	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	35.31	60,000	20,300		161-54-12D
7	35.46	60,000	20,300	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	35.60	60,000	20,200		161-54-14D
8	35.75	60,500	20,300	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	35.89	60,500	20,200		161-54-16D
9	36.04	60,500	20,100	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	36.18	60,900	20,100		161-54-18D
10	36.32	60,900	20,100	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	36.47	60,900	20,000		161-54-20D
11	36.61	60,900	19,900	161-45-21D (11-1/2 – 12-5/8)	(10-7/8 – 12-1/8)
11-1/2	36.76	61,500	20,000		161-54-22D
12	36.90	61,500	20,000	161-45-23D (12-5/8 – 13-3/4)	(12 – 13-1/4)
12-1/2	37.05	61,500	19,900		161-54-24D
13	37.19	61,900	19,900	161-45-25D (13-3/4 – 14)	(13-1/8 – 14)
13-1/2	37.34	61,900	19,800		
14	37.48	61,900	19,800		

WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

DA8184-L36 torque ratings and chain selection					
Diameter	Torque Arm Length (inches)	Maximum Torque (foot-pounds)	Maximum Handle Load (pounds)	Standard Chain Number	Alternate Chain Number
4	42.59	43,500	12,200	161-45-07D	N/A
4-1/2	42.74	47,200	13,200	(4 – 4-1/2)	161-54-08D
5	42.88	50,900	14,200	161-45-09D	(4-1/4 – 5-1/8)
5-1/2	43.03	54,400	15,100	(4-5/8 – 5-3/4)	161-54-10D
6	43.17	57,300	15,900	161-45-11D (5-7/8 – 7)	(5-1/4 – 6-3/8)
6-1/2	43.31	57,300	15,800		161-54-12D
7	43.46	57,300	15,800	161-45-13D (7 – 8-1/8)	(6-1/2 – 7-5/8)
7-1/2	43.60	57,300	15,700		161-54-14D
8	43.75	57,300	15,700	161-45-15D (8-1/8 – 9-1/4)	(7-1/2 – 8-3/4)
8-1/2	43.89	57,300	15,600		161-54-16D
9	44.04	57,800	15,700	161-45-17D (9-1/4 – 10-3/8)	(8-5/8 – 9-7/8)
9-1/2	44.18	57,800	15,600		161-54-18D
10	44.32	57,800	15,600	161-45-19D (10-3/8 – 11-1/2)	(9-7/8 – 11)
10-1/2	44.47	57,800	15,500		161-54-20D
11	44.61	57,800	15,500	161-45-21D (11-1/2 – 12-5/8)	(10-7/8 – 12-1/8)
11-1/2	44.76	57,800	15,400		161-54-22D
12	44.90	57,800	15,400	161-45-23D (12-5/8 – 13-3/4)	(12 – 13-1/4)
12-1/2	45.05	58,400	15,500		161-54-24D
13	45.19	58,400	15,500	161-45-25D (13-3/4 – 14)	(13-1/8 – 14)
13-1/2	45.34	58,400	15,400		
14	45.48	58,400	15,400		


WARNING: Under no circumstances should the maximum working load be exceeded. Overloading may result in injury or death. Always use a load cell or other calibrated indicating device to monitor the line pull on the tong to avoid an overload.

Parts List

The following drawings, diagrams, and parts lists describe all parts, which may be needed as replacement items.

All tong components are manufactured only by GEARENCH™. DO NOT ATTEMPT TO SUBSTITUTE THESE COMPONENTS. The tong will not work properly unless these components are matched to the specific application. Consult our factory as your requirements change. Any non-GEARENCH substitutions of these components void all warranties and subject the user to assumption of liabilities resulting from subsequent use.

Tong Assembly Parts List

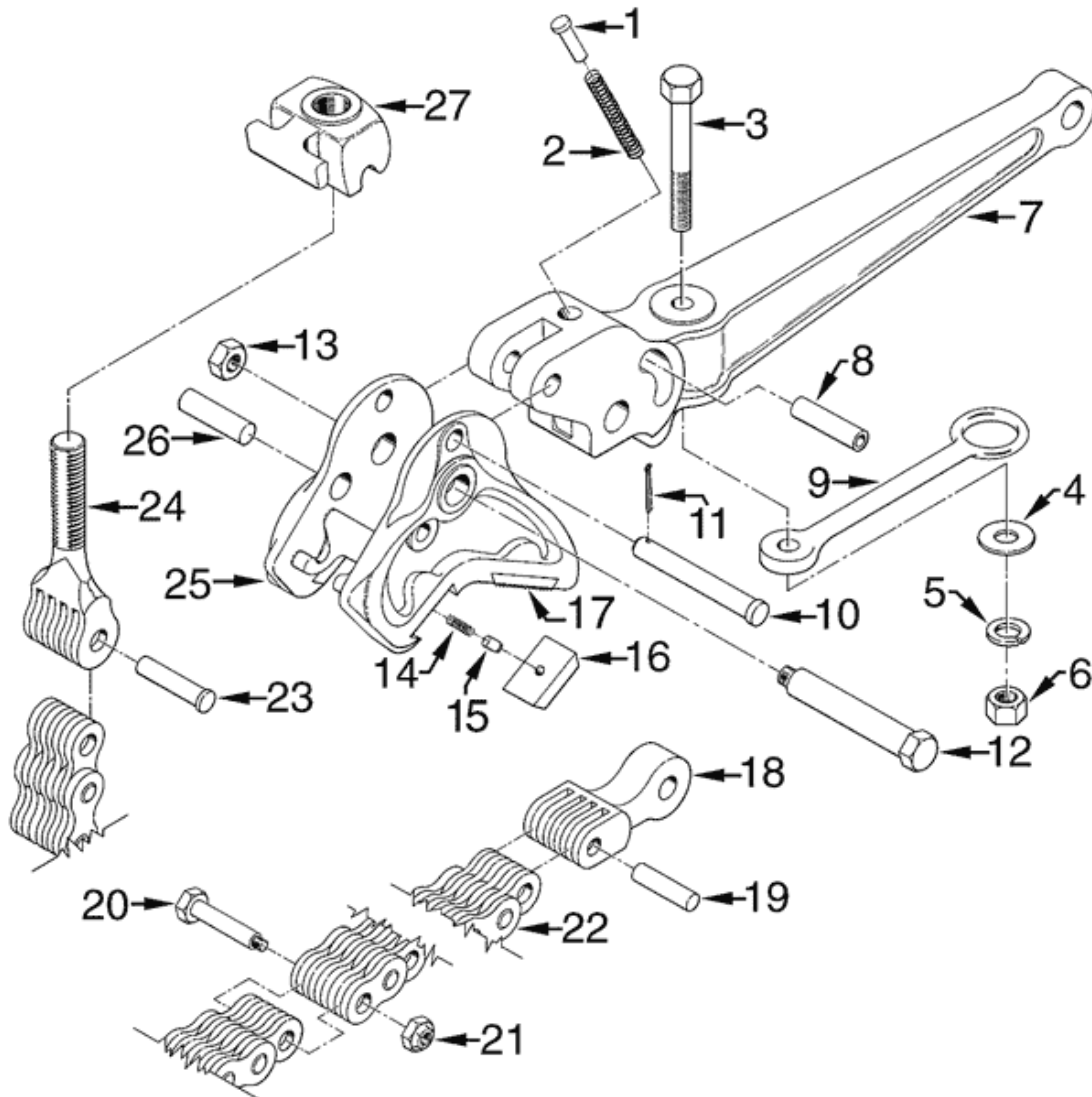

Tong Assembly Parts List

Item	Qty.	Part Number	Description
1	1	HG09	Spring guide
2	1	HS09	Spring
3	1	HB19	Hanger bolt
4	1	HXW001	Hanger flat washer
5	1	HXW002	Hanger lock washer
6	1	HXN023	Hanger nut
7	1	DH8184-C09	Handle, 9" clevis
7	1	DH8184-C18	Handle, 18" clevis
7	1	DH8184-C36	Handle, 36" clevis
7	1	LH116-23	Handle, 23" loop
7	1	LH116-28	Handle, 28" loop
7	1	LH116	Handle, 36" loop
8	1	HU36	Spring pin bushing
9	1	HH16	Bar hanger
10	1	HP250	Spring pin
11	1	HXC003	Spring pin cotter
12	1	HP249	Jaw – handle pin
13	2	HXRR150	Jaw pin retaining ring
14	4	HS21	Insert key spring
15	4	HP904	Insert key
16,17	4	HI09D	Diamond point insert (standard)
16,17	4	HI09K	Knurled insert (optional)
16,17	4	HI09T-4	Straight tooth insert (optional) 4 teeth / inch
16,17	4	HI09T-7	Straight tooth insert (optional) 7 teeth / inch
18	1	HM06-45	Master link
19	1	HP045	Master link - chain rivet
20	As req'd	HB52	Chain splice bolt
21	As req'd	HXN016	Chain splice bolt nut
22	As req'd	161-45-02	Special chain link (2 link section)
22	As req'd	161-45-04	Special chain link (4 link section)
22	As req'd	161-45-05	Special chain link (5 link section)
22	As req'd	161-45-06	Special chain link (6 link section)
23	As req'd	HP247	Chain screw rivet
24	1	HV08-45	Chain screw, 4-5 chain combination
24	1	HV08-54	Chain screw, 5-4 chain combination
25	1	DJ8184	Jaw
26	1	HP234	Master link – handle pin
27	1	HN08	Chain screw nut



Wear Limits

The following table indicates limiting diameters on the components of the PETOL™ Drill Pipe Tong. When localized wear is beyond any one of the limits indicated, the component should be replaced.

Part Number	Description	Location	Limit Dimension
HP249	Jaw – handle pin	Pin body diameter	1.482 (min)
HP234	Master link – handle pin	Pin body diameter	0.978 (min)
HB52	Chain splice bolts	Bolt body diameter	0.611 (min)
161-45-XX	Chain links	Pin hole diameter	0.640 (max)
161-45-XX	Chain links	Pitch center – center	1.739 (max per pitch)
DH8184-XXX LH116-XXX	Handle	Jaw pin hole diameter	1.525 (max)
DH8184-XXX LH116-XXX	Handle	Chain pin hole diameter (master link)	1.025 (max)
DH8184-C09	Handle	Load loop diameter	1.665 (max)
DH8184-C18	Handle	Load loop diameter	1.061 (max)
DH8184-C36	Handle	Load loop diameter	2.030 (max)
LH116-23	Handle	Load loop diameter	1.785 (max)
LH116-28	Handle	Load loop diameter	1.666 (max)
LH116	Handle	Load loop diameter	2.125 (max)
DJ8184	Jaw	Jaw pin hole diameter	1.525 (max)
HM06-45	Master link	Handle pin diameter	1.023 (max)
HM06-45	Master link	Chain pin diameter	0.641 (max)
HV08-45 HV08-54	Chain screw	Chain pin diameter	0.640 (max)

Non-Destructive Evaluation

The figures below indicate the critical areas of the tong handle and jaw. A critical area is defined as an area in which no unrepaired crack indications are permitted and in which no major weld repairs are permitted. There are no critical areas on the bar hanger. Weld repairs are only permitted on the handle, jaw, and bar hanger.

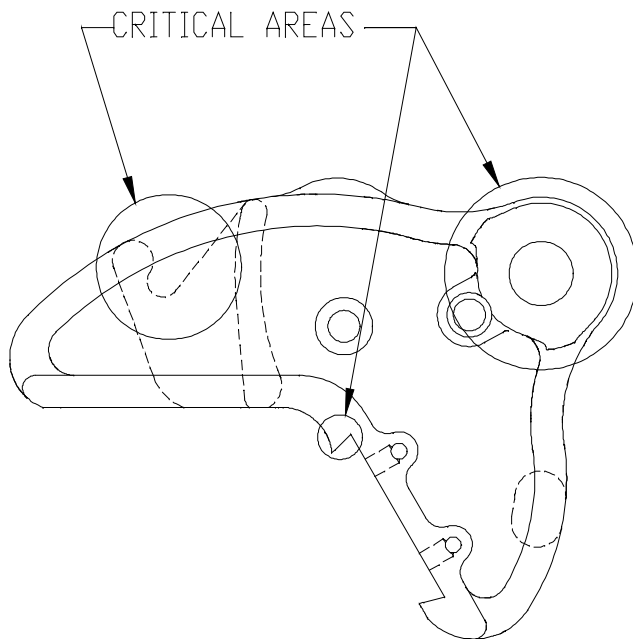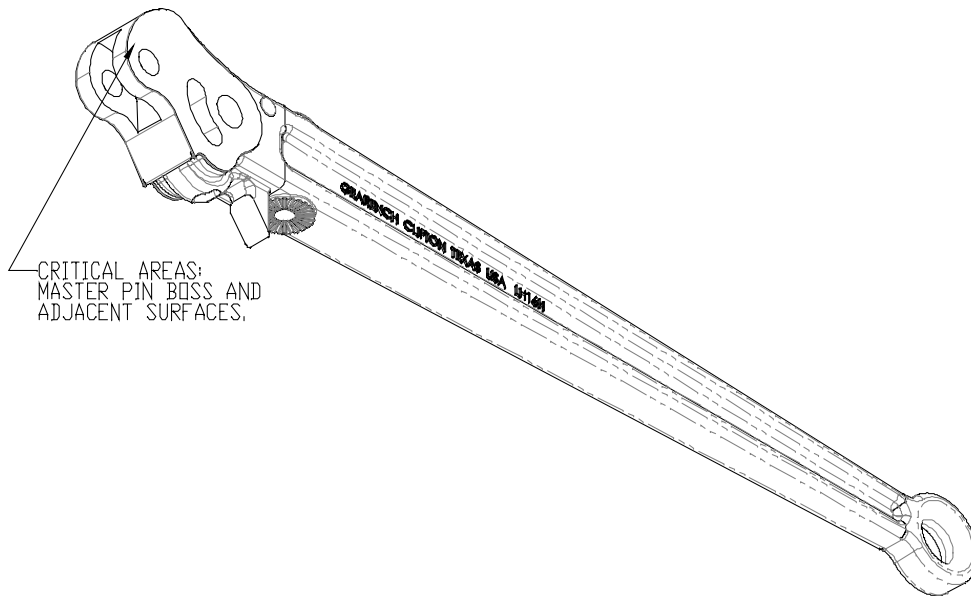

Weld Repairs

Scope:

This procedure is to be followed for minor repairs of crack indications in heat treated alloy steels. A weld repair shall be considered minor when the depth of the cavity does not exceed 30% of the actual wall thickness or 1 inch, whichever is smaller, or when the extent of the cavity does not exceed approximately 10 square inches. Major weld repairs must be performed by GEARENCH™ or an approved repair center using appropriate procedures followed by full heat treatment and load testing.

Application:

This procedure applies to steel castings, forgings and, wrought with carbon content between 0.15% and 0.31%.

Weld preparation:

The crack indication is to be removed by carbon arc gouging, grinding, or machining until all indication is removed. Magnetic particle inspection shall be used to verify that the crack indication has been removed.

Filler material and process:

Repairs made with the FCAW process shall use a filler material of class E120T5-K4 or equivalent with CO₂ shielding gas. Repairs made with the SMAW process shall use a filler material of type E-12018-M. All welding is to be performed by a qualified welder.

Preheat:

Preheat the weld area to 300°F minimum.

Interpass temperature:

The interpass temperature is to be 600°F maximum. All weld slag to be removed prior to application of additional layers by chipping, grinding or wire brushing. Do not peen the weld repair.

Post weld heat treatment:

Do not allow weld to cool below 300°F before stress relief. Post heat immediately after welding to 1010 - 1040°F for 1 hour per inch of thickness, 2 hours minimum at temperature. Water quench after stress relief.

Weld blending and inspection:

The weld is to be ground flush with the adjacent parent material. The weld is to be inspected by magnetic particle to verify that the weld area is free of all crack indications.